

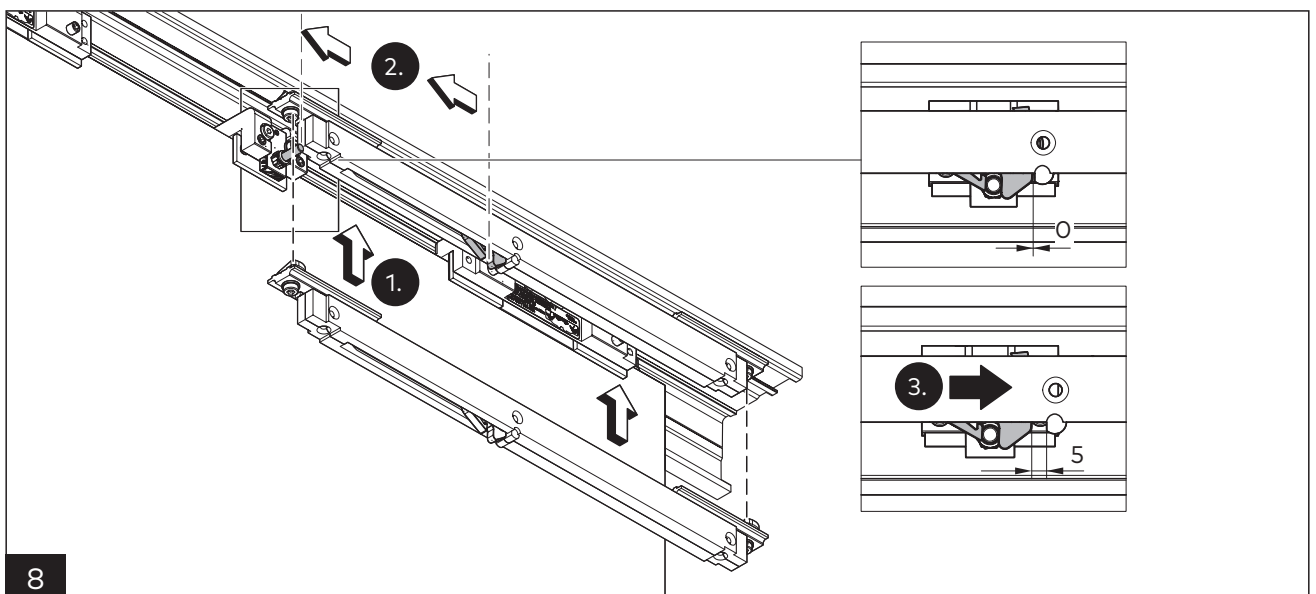
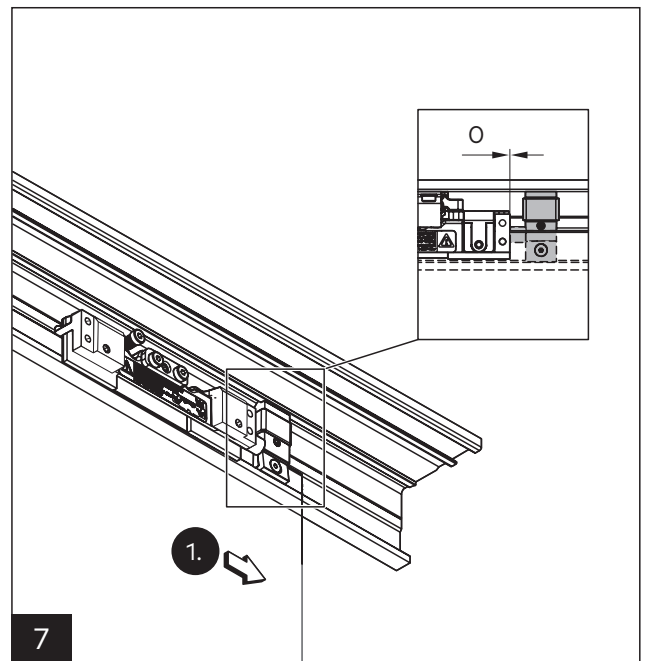
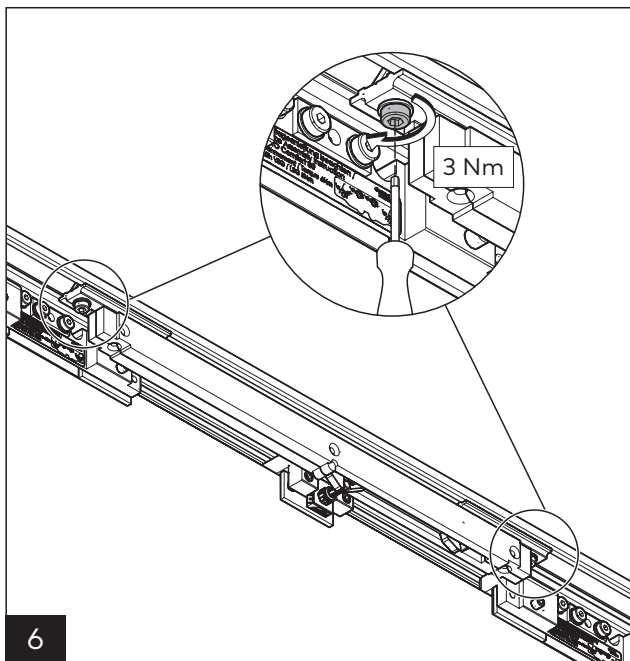


# MUTO Premium DORMOTION 2021


Montageanleitung

WN 060034 45532 /15388  
2020-11

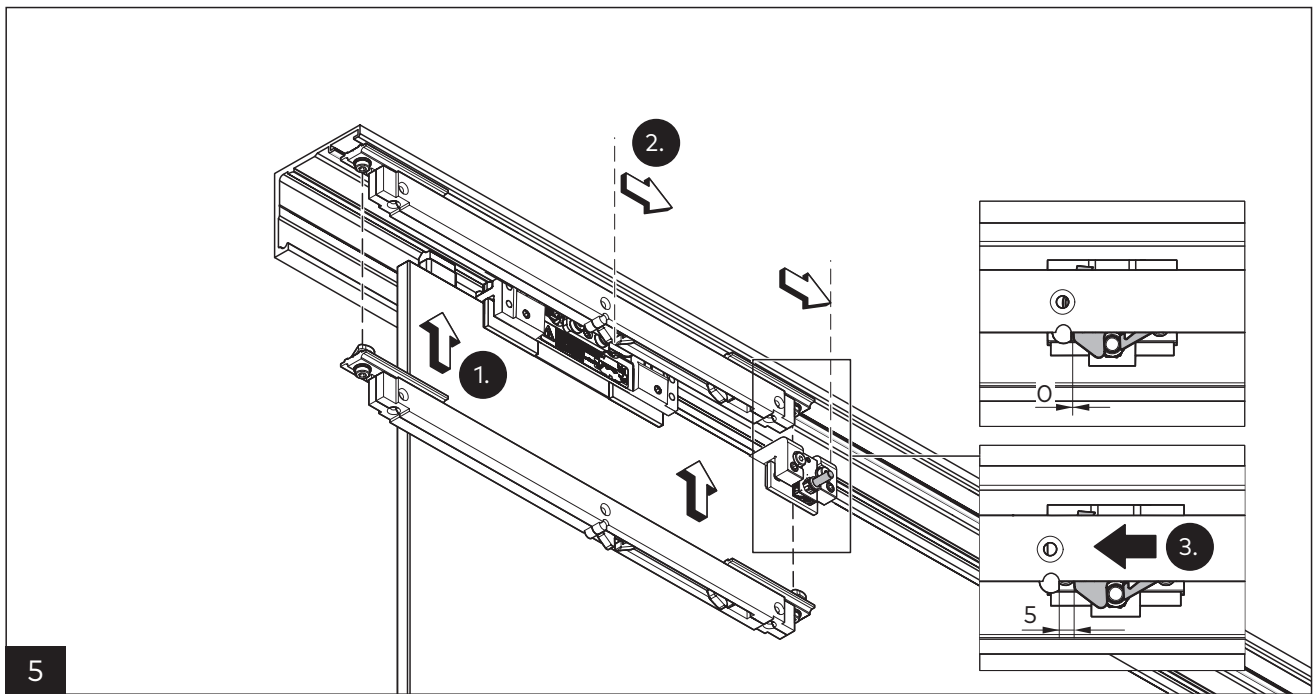

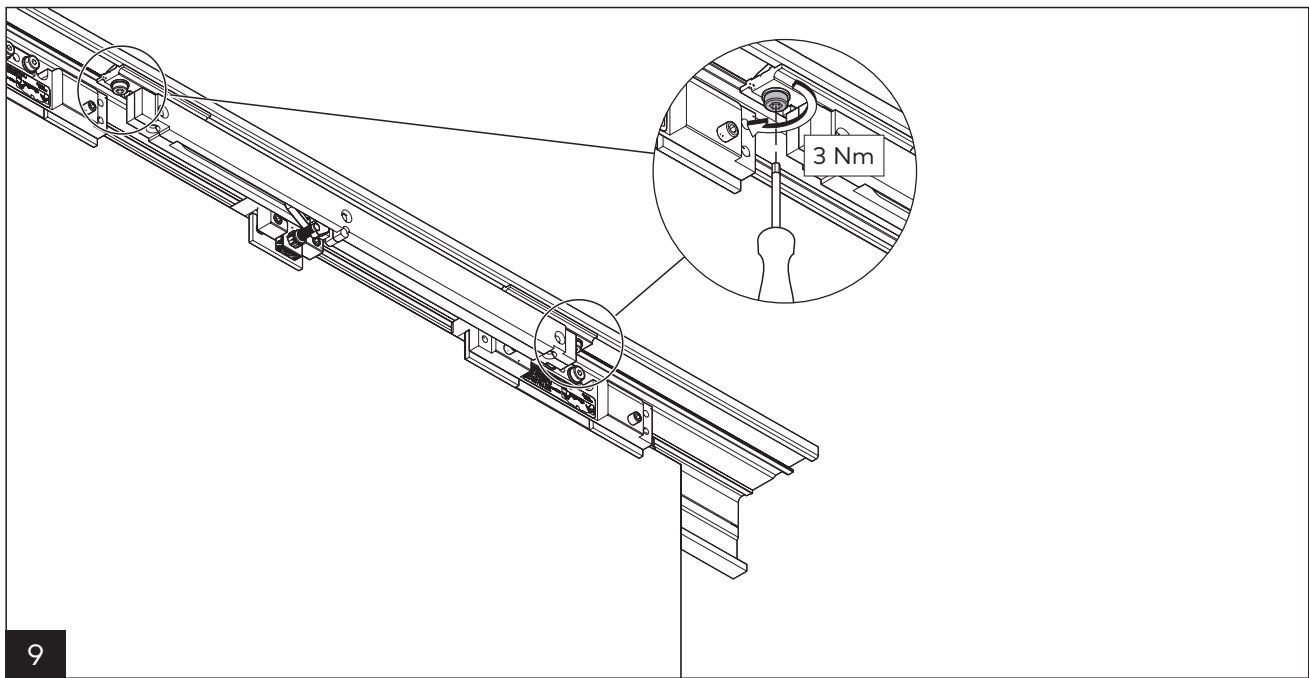

9

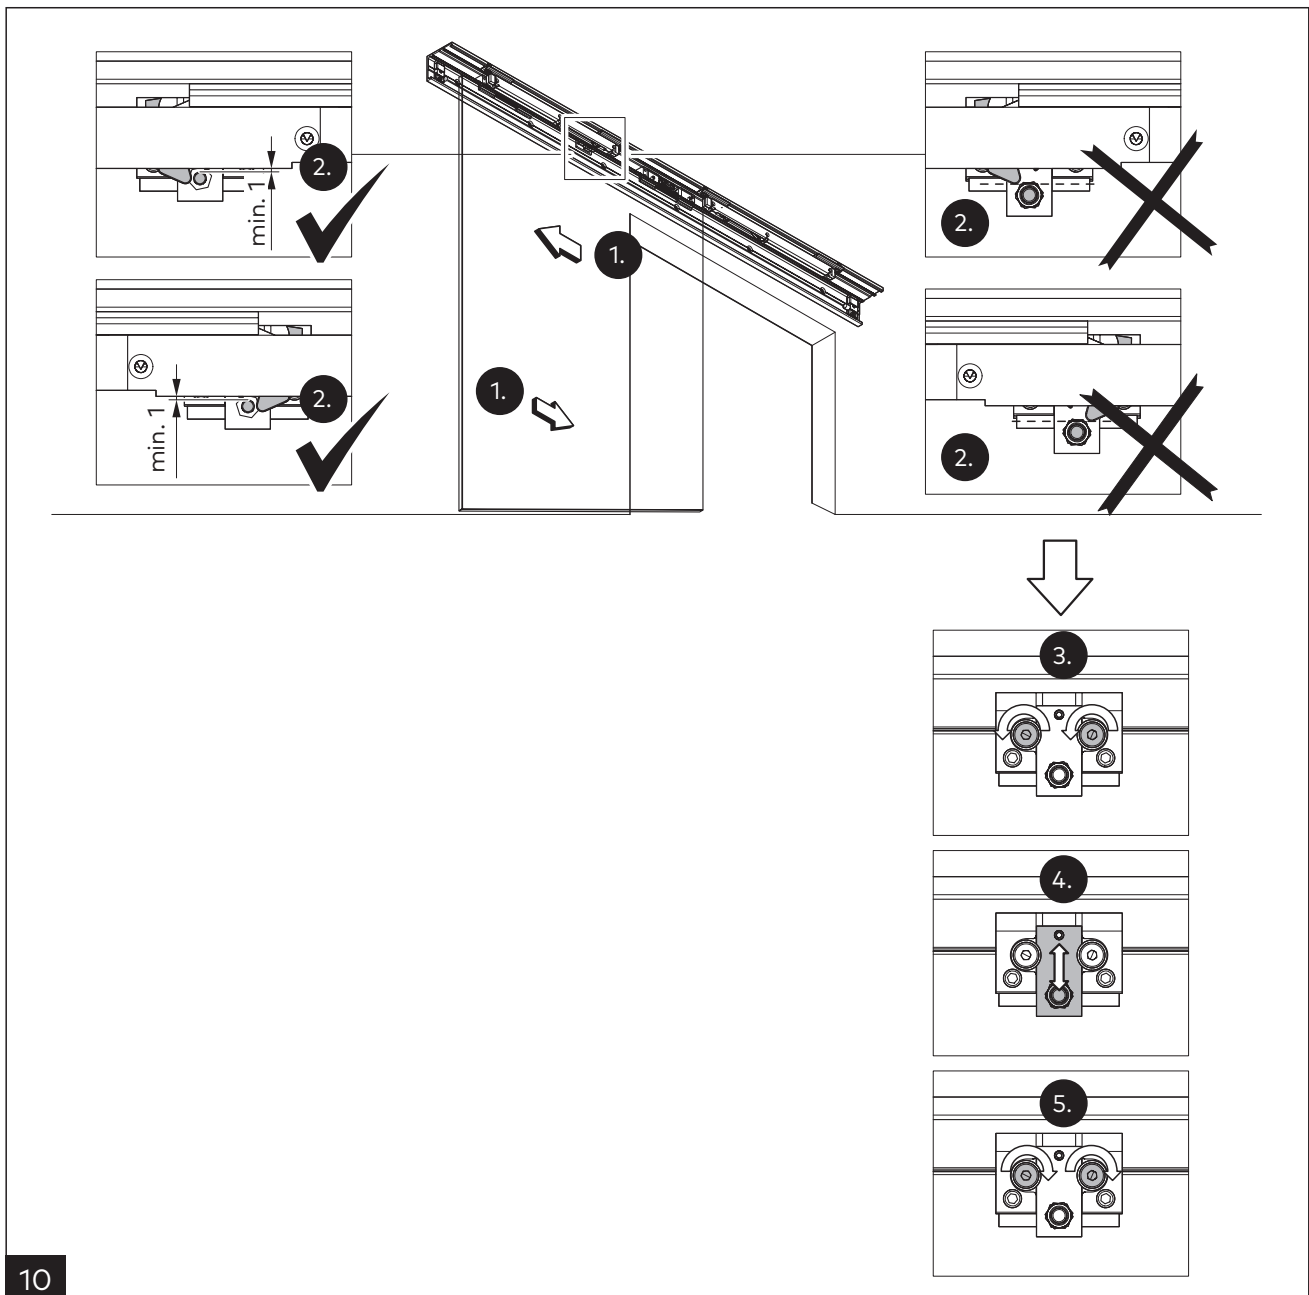

10

